



FAST INSTALLATION GUIDE

YBW-22 PMG

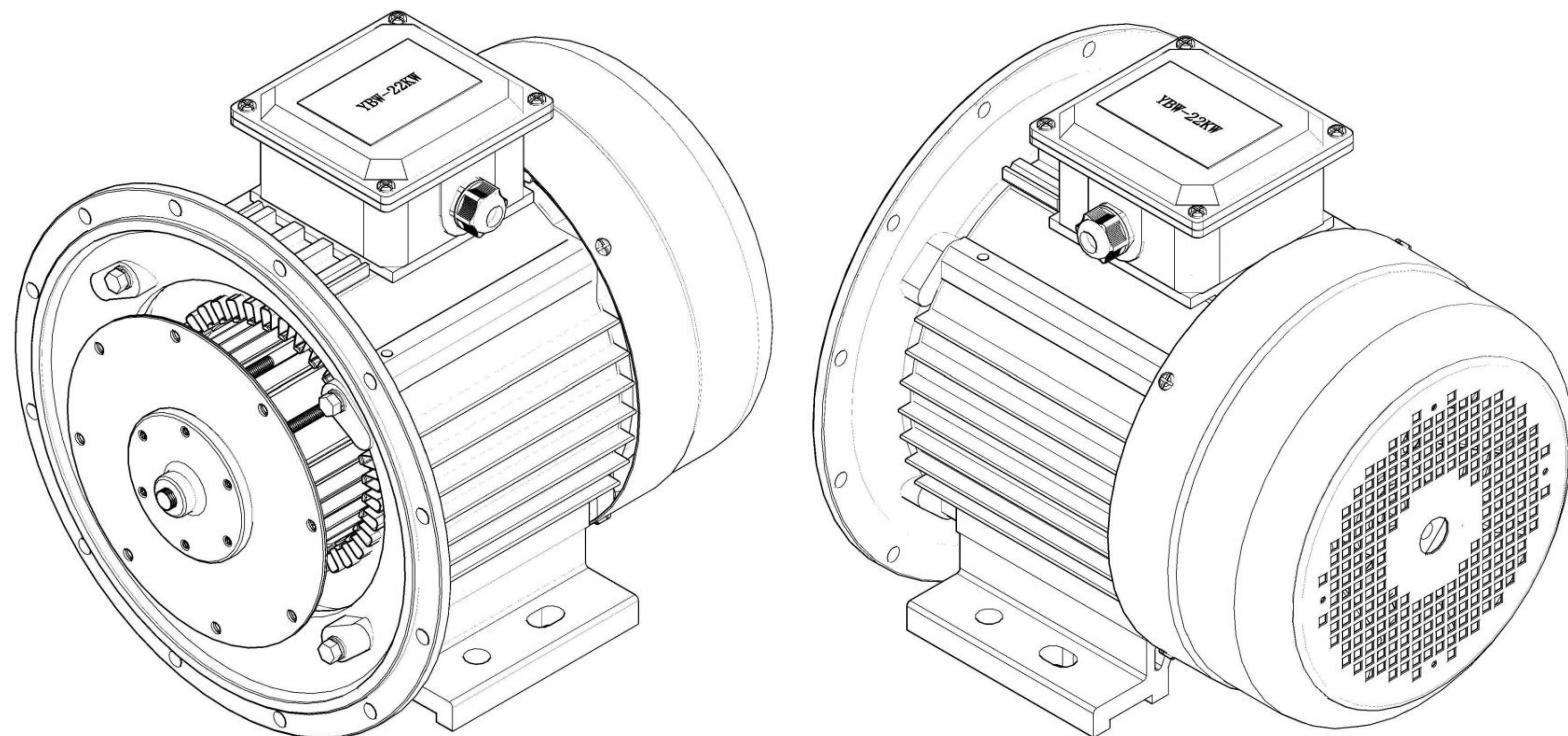



1. Installations

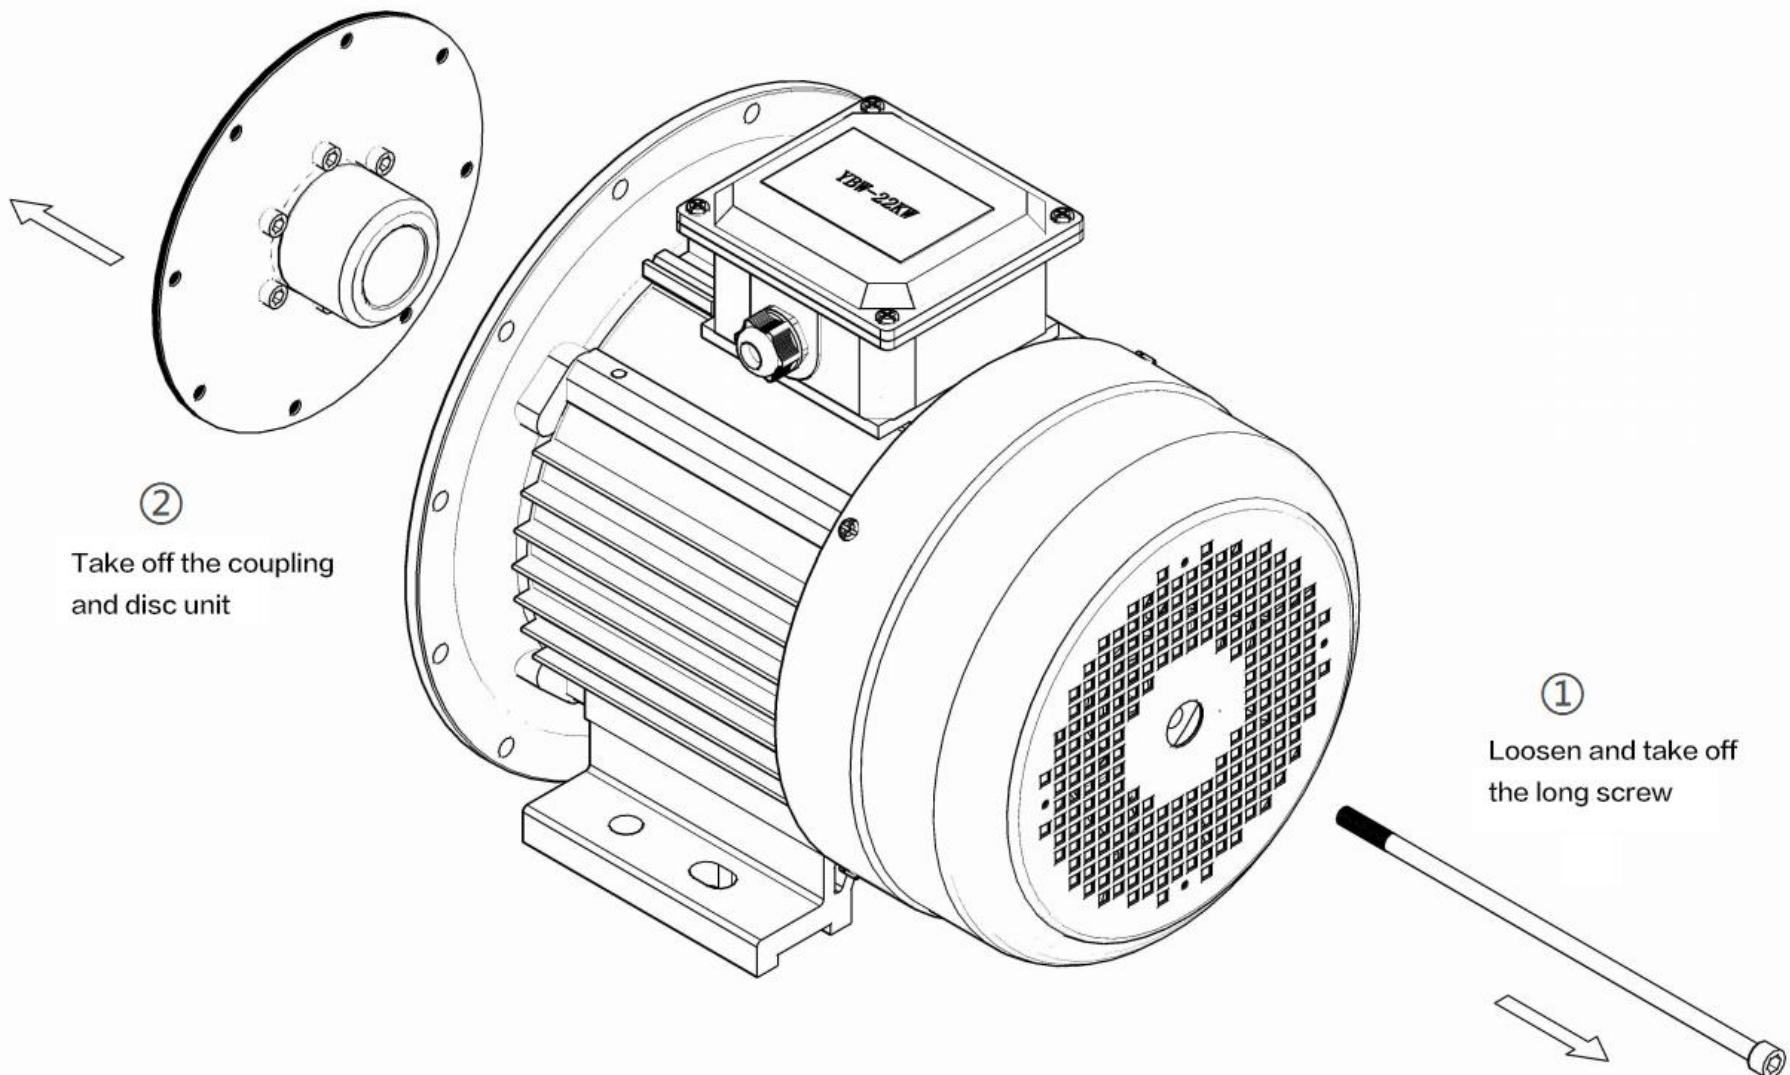


③

Install the coupling and disc unit
on the flywheel

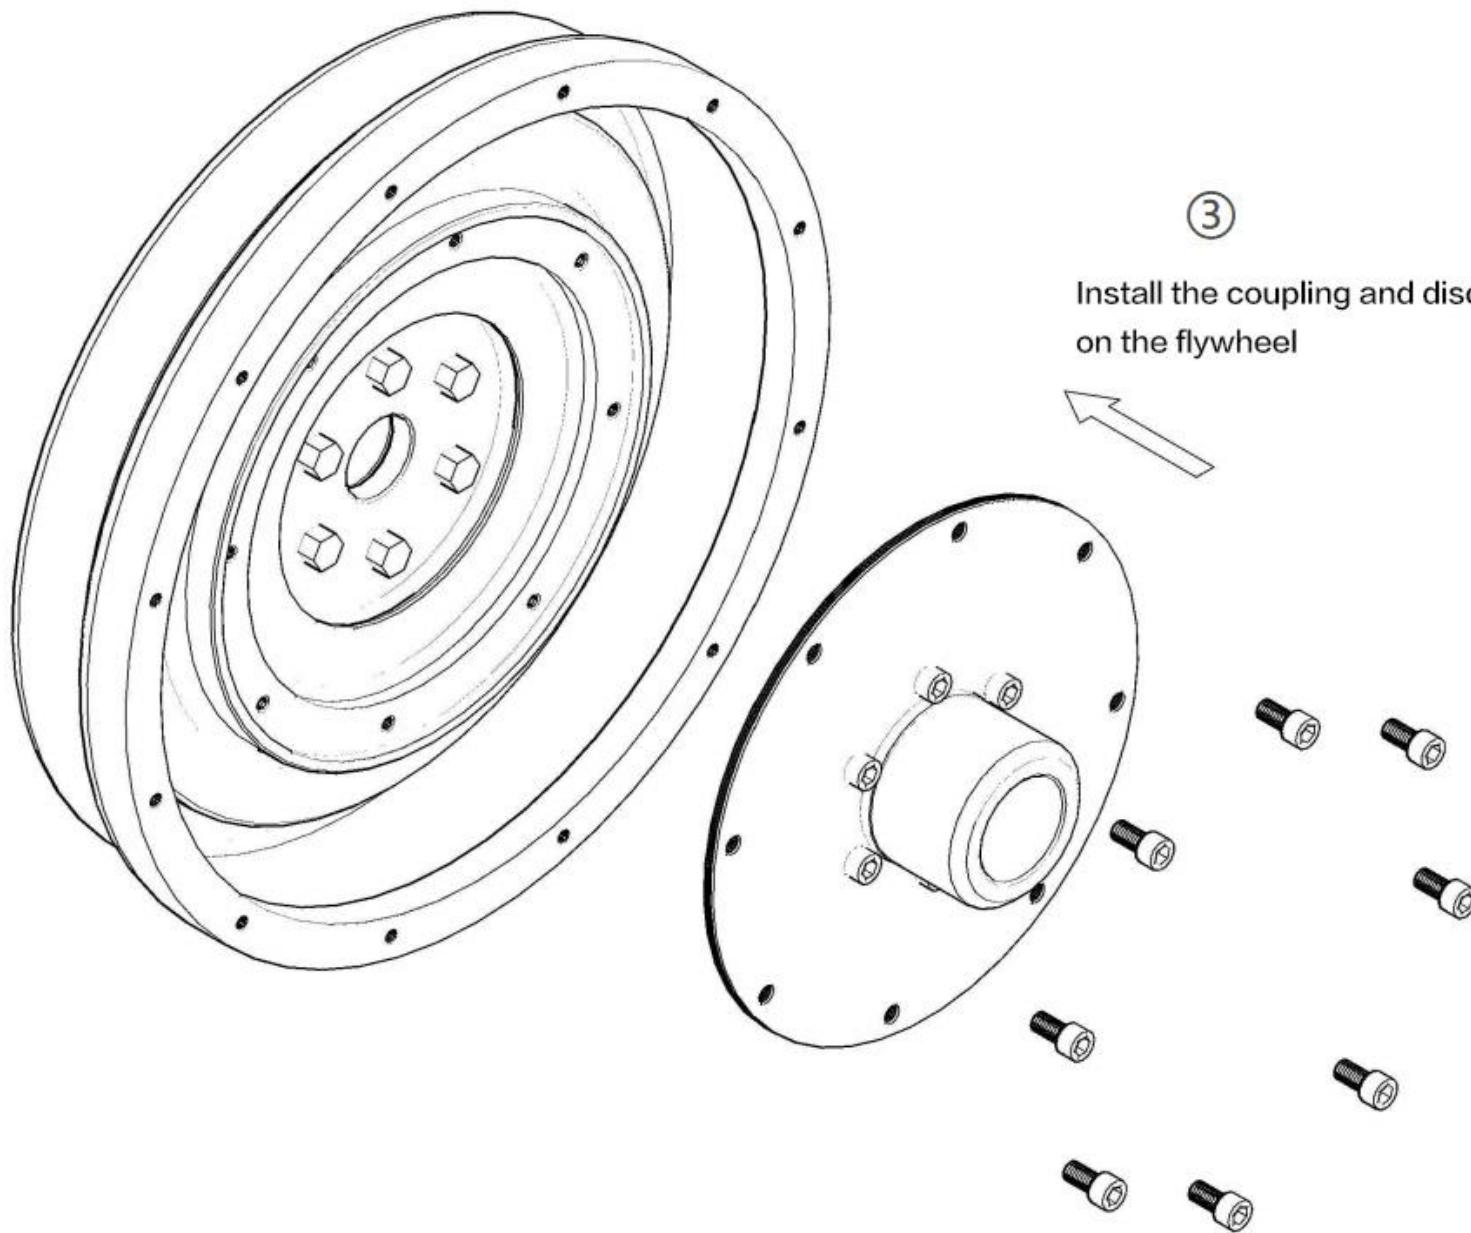

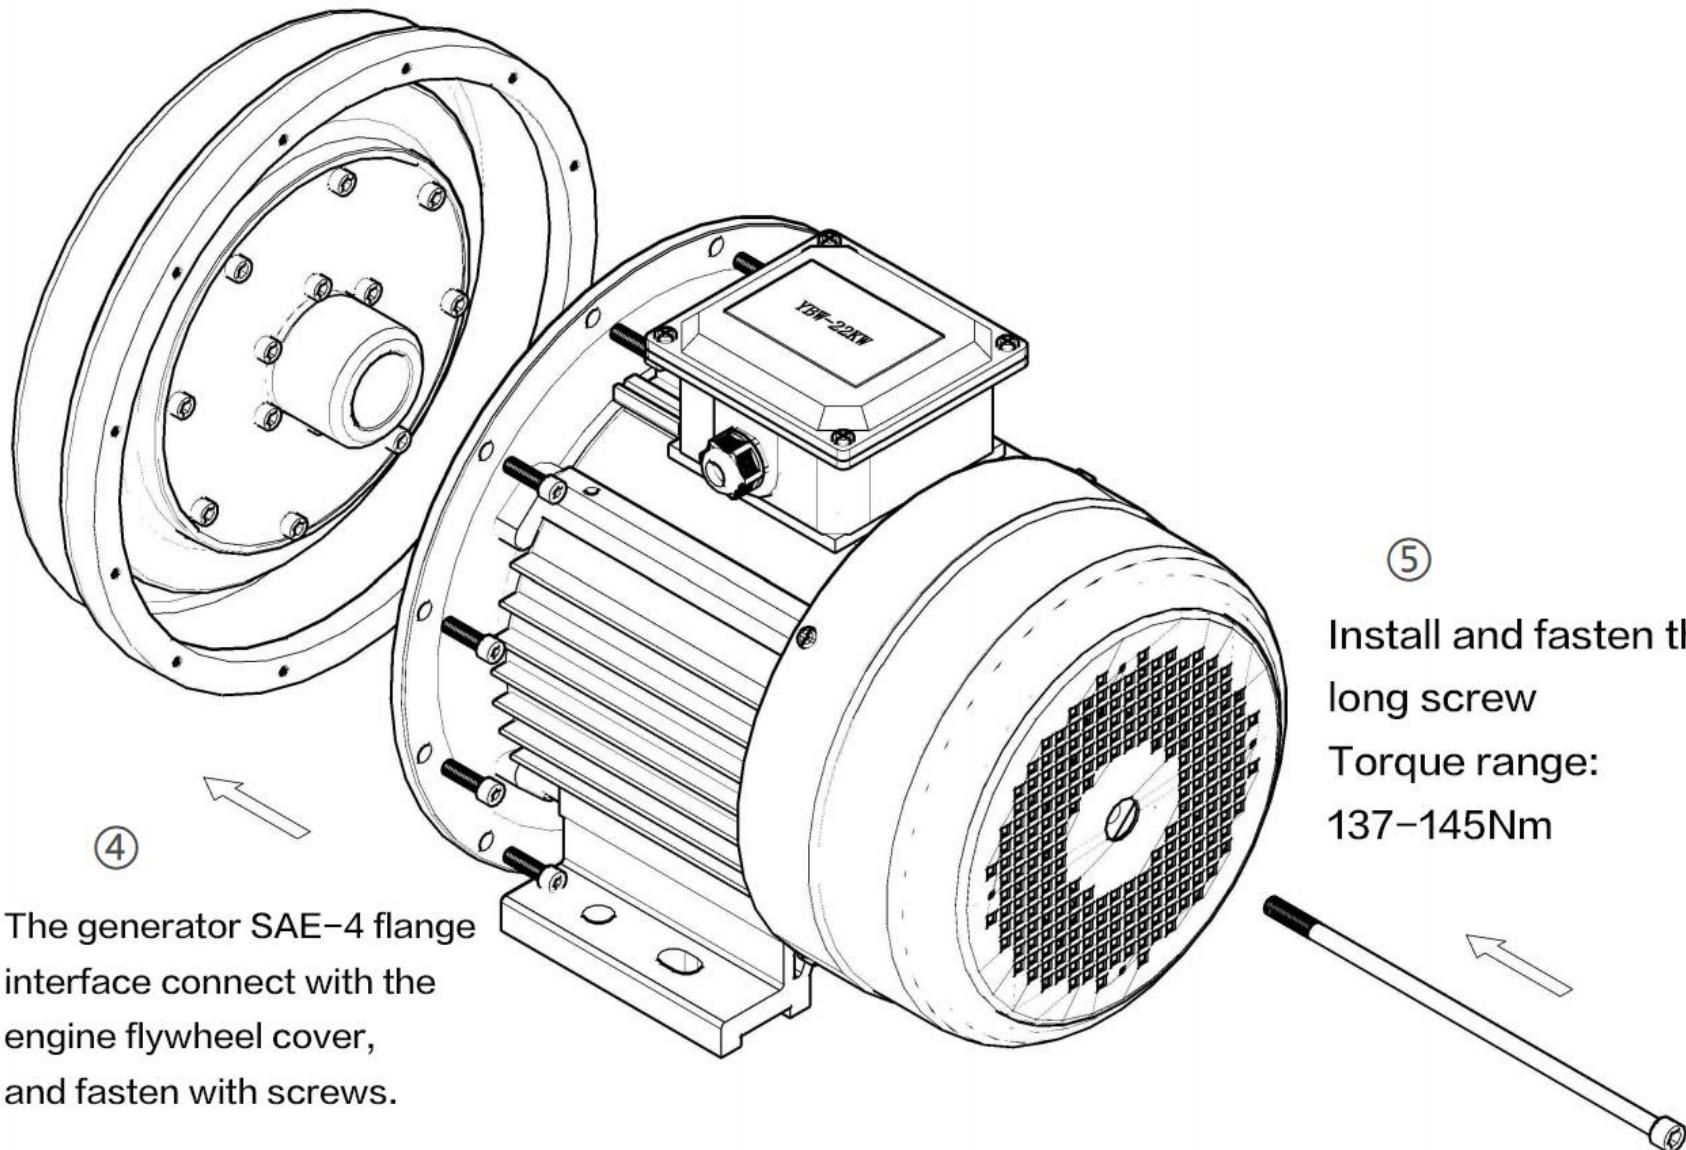

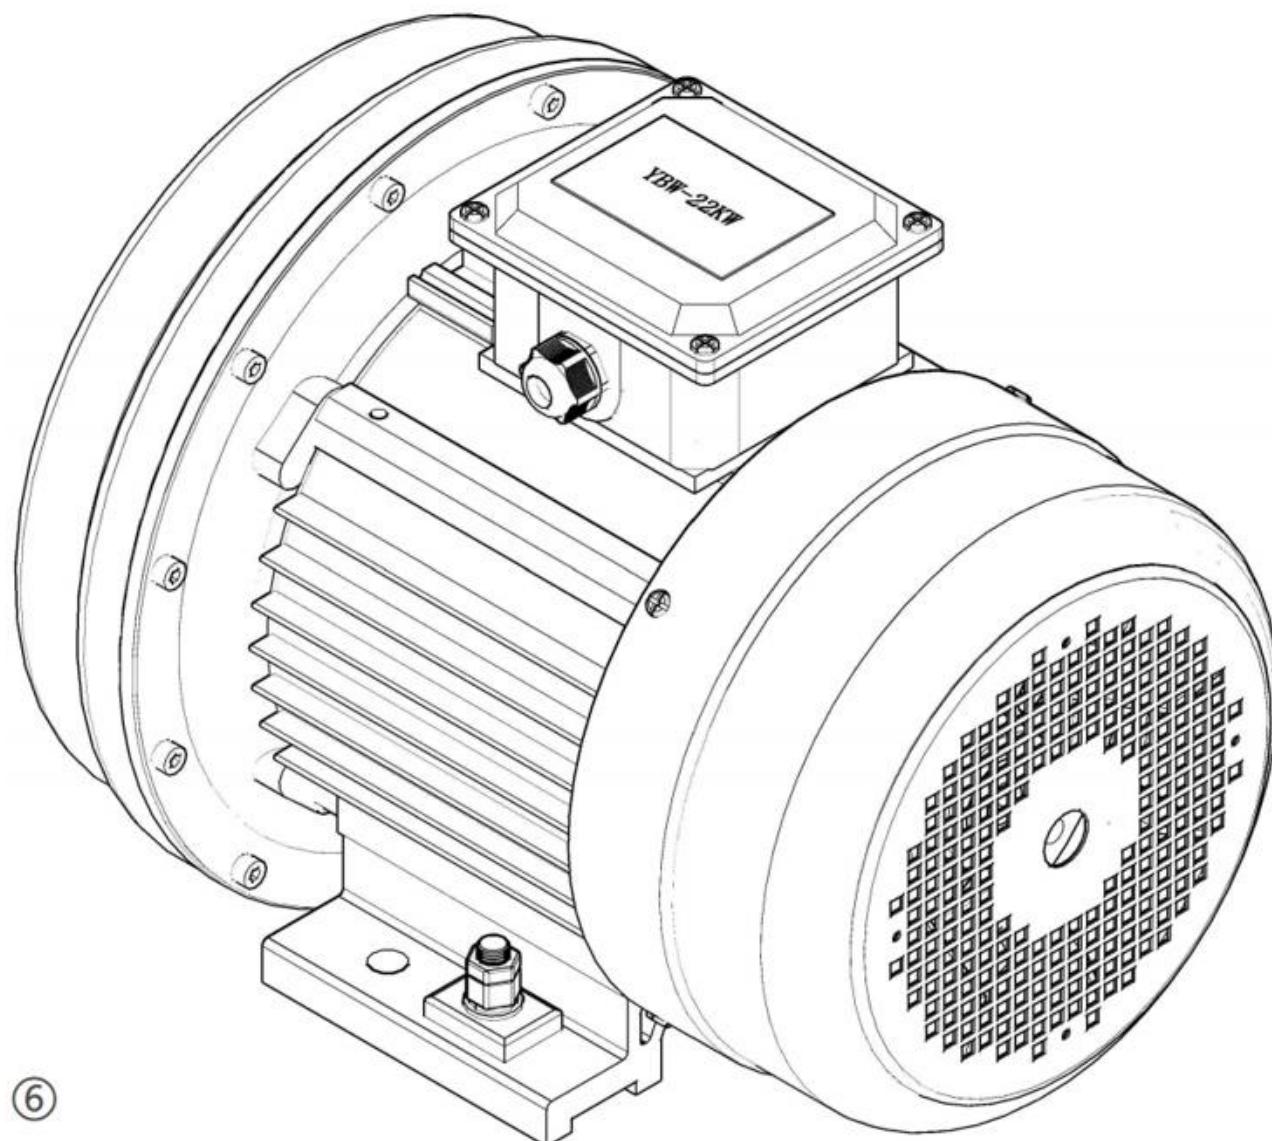



⑥

Install the shock absorber pad, fasten the feet screws.

Connect the ground terminal with the feet screws. The ground wire shoud be 2.5mm^2


2. Uninstallation

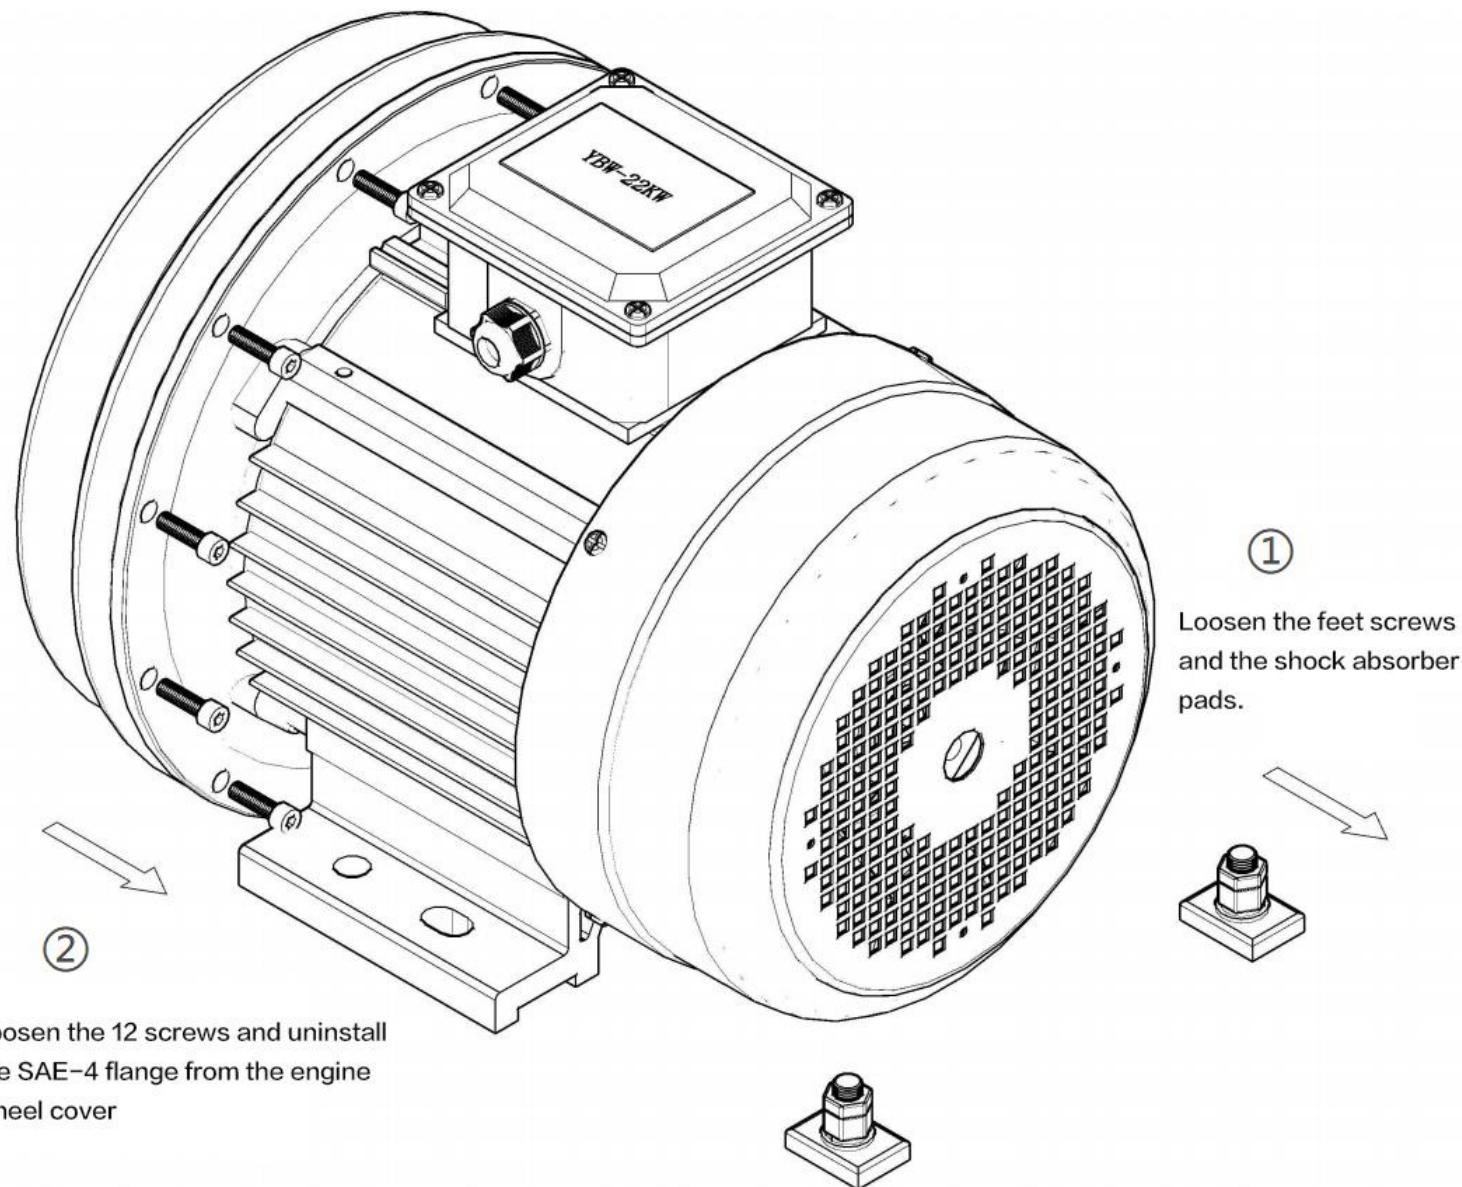

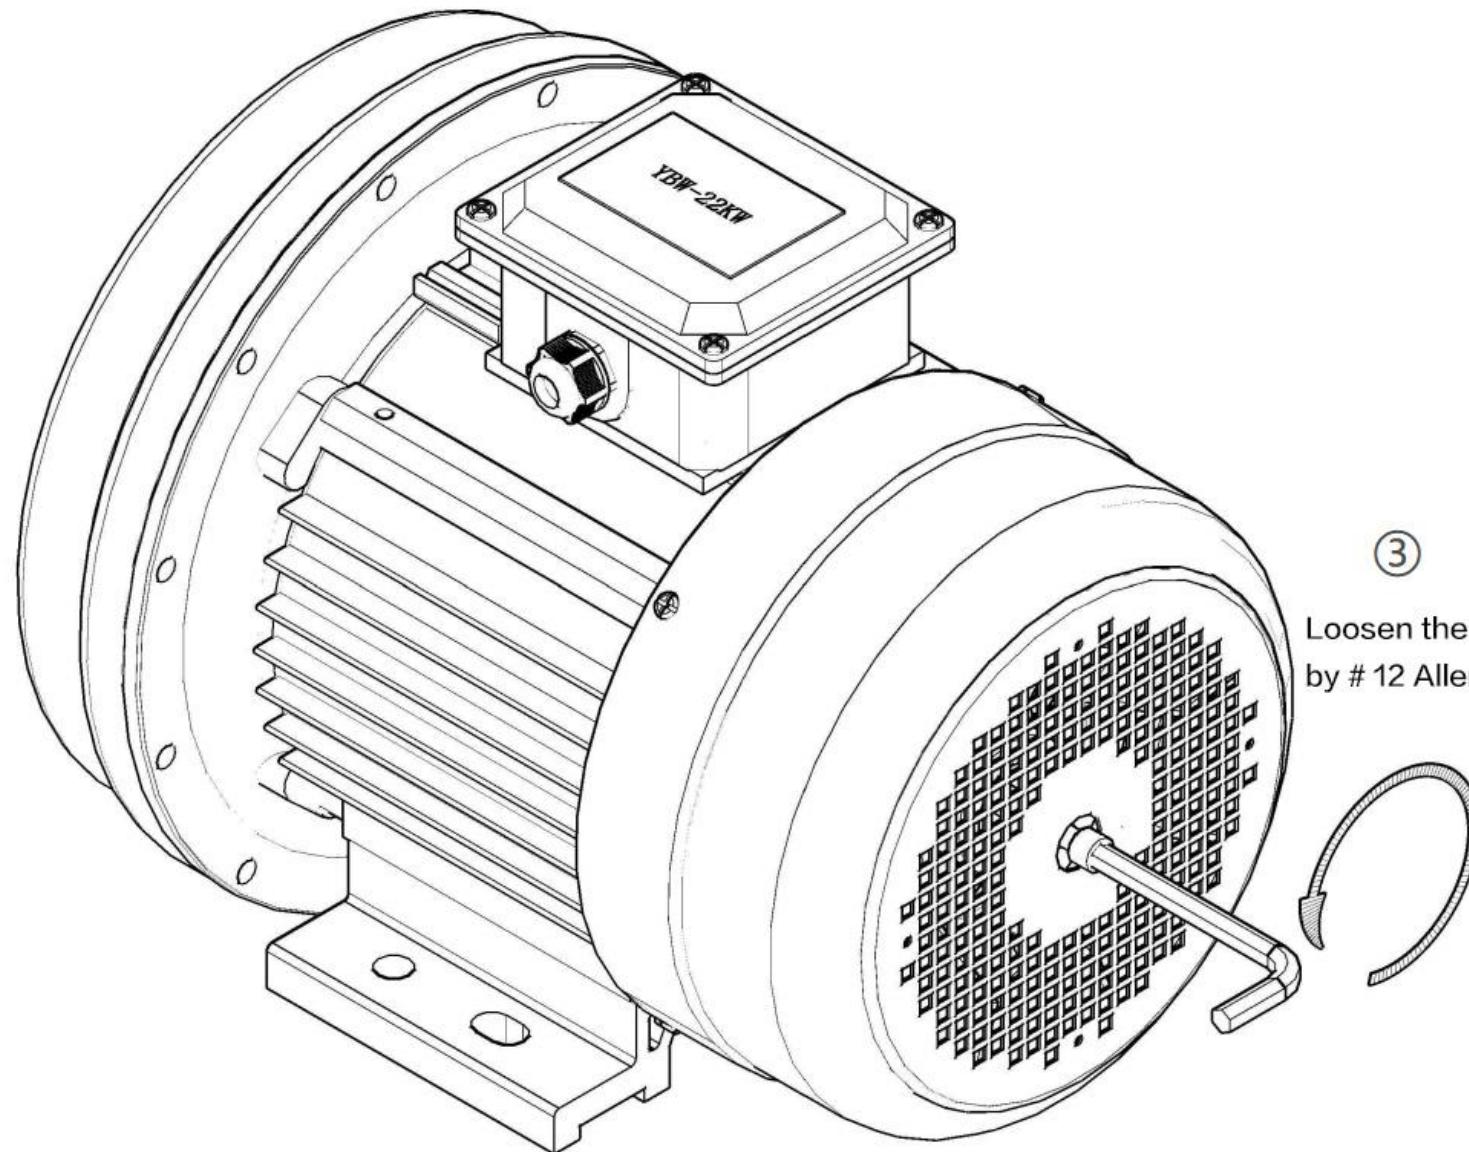

③

Loosen the long screw
by # 12 Allen wrench.

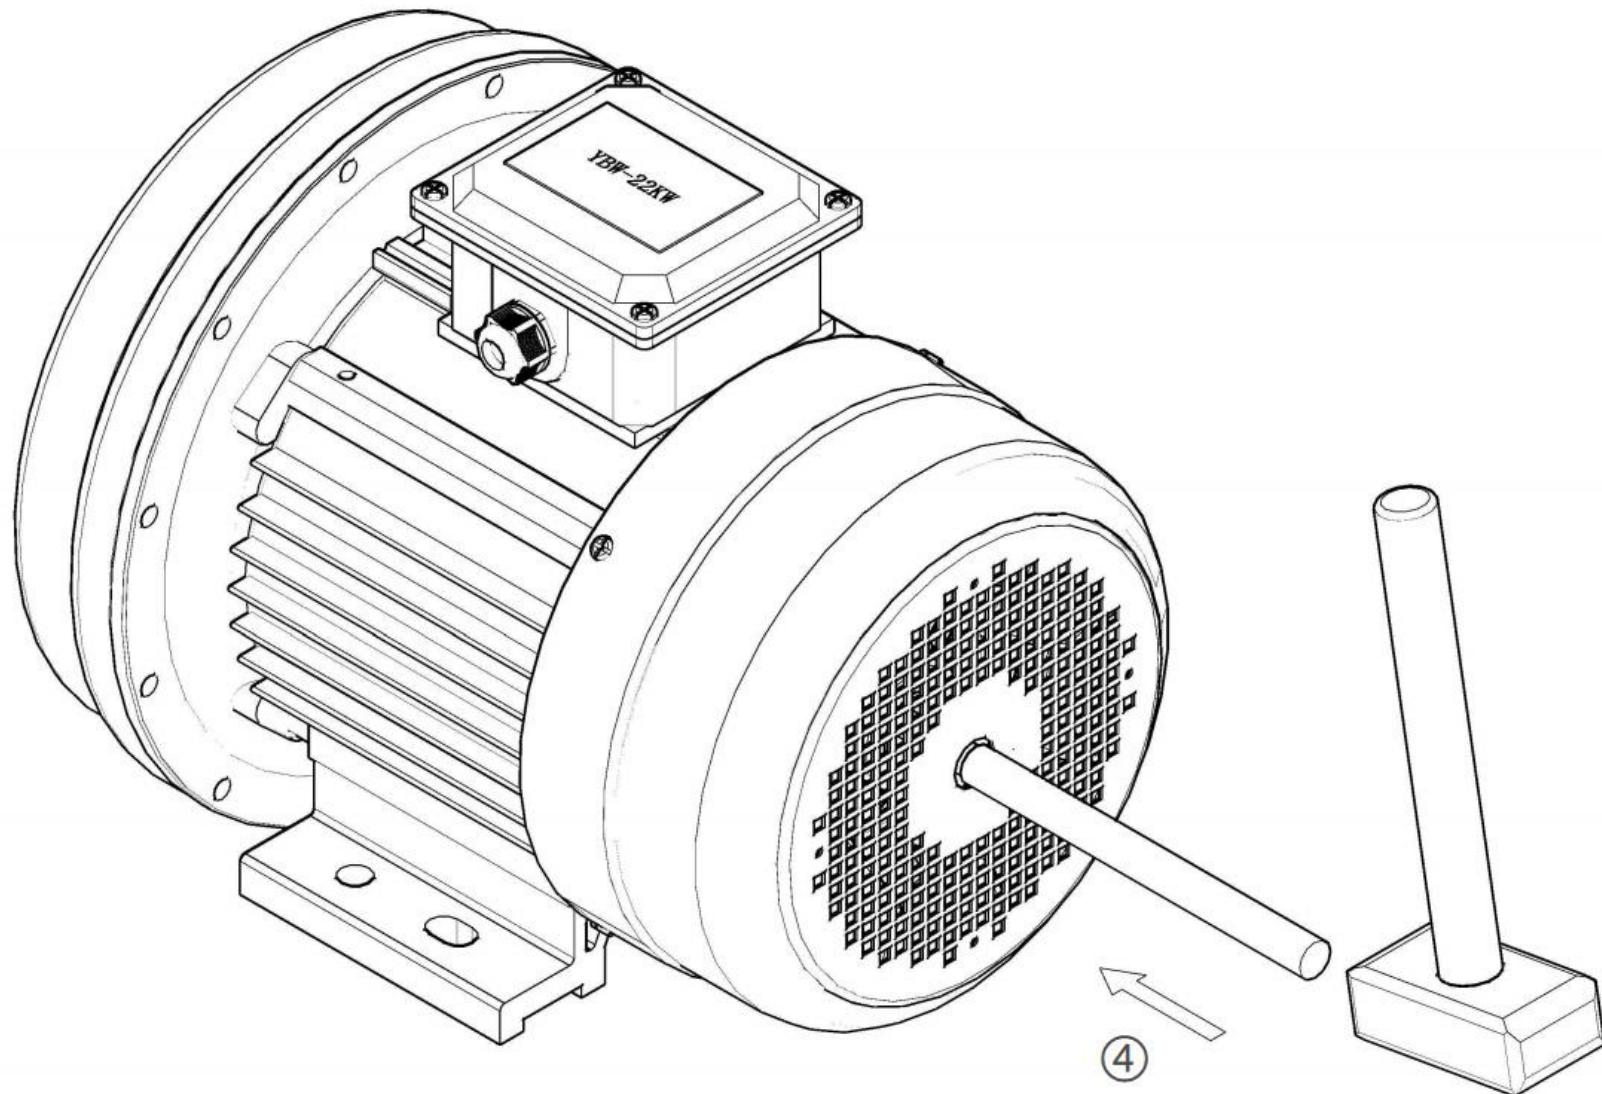

Pummel the long screw for 3~5 times to uninstall
the coupling and disc unit from the shaft.

